



FEL-PRO INSTALLATION TIPS

INSTALLATION INSTRUCTIONS

- Clean Mating Surfaces of all foreign material
- Check Pan Flanges for flatness straighten or replace if severely distorted
- Attach & Align end seals, apply adhesive sparingly to the mating surfaces
- Attached & Align gaskets, apply adhesive sparingly to the mating surfaces
- Apply a small dab of silicone sealant where all gaskets and seals meet
- Torque to OEM specifications

© 2007 Federal-Mogul Corporation Printed in U.S.A.
Form No. I-33 (Rev. 01/07)



FEL-PRO INSTALLATION TIPS

INSTALLATION INSTRUCTIONS

- Clean Mating Surfaces of all foreign material
- Check Pan Flanges for flatness straighten or replace if severely distorted
- Attach & Align end seals, apply adhesive sparingly to the mating surfaces
- Attached & Align gaskets, apply adhesive sparingly to the mating surfaces
- Apply a small dab of silicone sealant where all gaskets and seals meet
- Torque to OEM specifications

© 2007 Federal-Mogul Corporation Printed in U.S.A.
Form No. I-33 (Rev. 01/07)



FEL-PRO INSTALLATION TIPS

INSTALLATION INSTRUCTIONS

- Clean Mating Surfaces of all foreign material
- Check Pan Flanges for flatness straighten or replace if severely distorted
- Attach & Align end seals, apply adhesive sparingly to the mating surfaces
- Attached & Align gaskets, apply adhesive sparingly to the mating surfaces
- Apply a small dab of silicone sealant where all gaskets and seals meet
- Torque to OEM specifications

© 2007 Federal-Mogul Corporation Printed in U.S.A.
Form No. I-33 (Rev. 01/07)



FEL-PRO INSTALLATION TIPS

INSTALLATION INSTRUCTIONS

- Clean Mating Surfaces of all foreign material
- Check Pan Flanges for flatness straighten or replace if severely distorted
- Attach & Align end seals, apply adhesive sparingly to the mating surfaces
- Attached & Align gaskets, apply adhesive sparingly to the mating surfaces
- Apply a small dab of silicone sealant where all gaskets and seals meet
- Torque to OEM specifications

© 2007 Federal-Mogul Corporation Printed in U.S.A.
Form No. I-33 (Rev. 01/07)



FEL-PRO INSTALLATION TIPS

INSTALLATION INSTRUCTIONS

- Clean Mating Surfaces of all foreign material
- Check Pan Flanges for flatness straighten or replace if severely distorted
- Attach & Align end seals, apply adhesive sparingly to the mating surfaces
- Attached & Align gaskets, apply adhesive sparingly to the mating surfaces
- Apply a small dab of silicone sealant where all gaskets and seals meet
- Torque to OEM specifications

© 2007 Federal-Mogul Corporation Printed in U.S.A.
Form No. I-33 (Rev. 01/07)



FEL-PRO INSTALLATION TIPS

INSTALLATION INSTRUCTIONS

- Clean Mating Surfaces of all foreign material
- Check Pan Flanges for flatness straighten or replace if severely distorted
- Attach & Align end seals, apply adhesive sparingly to the mating surfaces
- Attached & Align gaskets, apply adhesive sparingly to the mating surfaces
- Apply a small dab of silicone sealant where all gaskets and seals meet
- Torque to OEM specifications

© 2007 Federal-Mogul Corporation Printed in U.S.A.
Form No. I-33 (Rev. 01/07)



FEL-PRO INSTALLATION TIPS

INSTALLATION INSTRUCTIONS

- Clean Mating Surfaces of all foreign material
- Check Pan Flanges for flatness straighten or replace if severely distorted
- Attach & Align end seals, apply adhesive sparingly to the mating surfaces
- Attached & Align gaskets, apply adhesive sparingly to the mating surfaces
- Apply a small dab of silicone sealant where all gaskets and seals meet
- Torque to OEM specifications

© 2007 Federal-Mogul Corporation Printed in U.S.A.
Form No. I-33 (Rev. 01/07)