

Needle & Seat Assembly Installation Instructions

CAUTION

Excessive Tightening Of The Needle Seat Locknut Can Cause Thread Distortion And Damage To The Fuel Bowl.

Proper Installation Is As Follows:

- 1. Install and Adjust Needle & Seat To Provide Correct Fuel Level**
- 2. Tighten Locknut Until Nut Contacts The Fuel Bowl Surface. Then Tighten An Additional 1/8 Turn, Or To A Torque Value Of 15-20 Inch Pounds.**