

# **Needle & Seat Assembly Installation Instructions**

## **CAUTION**

**Excessive Tightening Of The Needle Seat Locknut Can Cause Thread Distortion And Damage To The Fuel Bowl.**

**Proper Installation Is As Follows:**

- 1. Install and Adjust Needle & Seat To Provide Correct Fuel Level**
- 2. Tighten Locknut Until Nut Contacts The Fuel Bowl Surface. Then Tighten An Additional 1/8 Turn, Or To A Torque Value Of 15-20 Inch Pounds.**