




SLIM-FIT RADIATOR WIRING REFERENCE

Check your circuit board (Figure 1) to make sure vehicle installation wires, 1-5 are connected as shown (Figure 2).

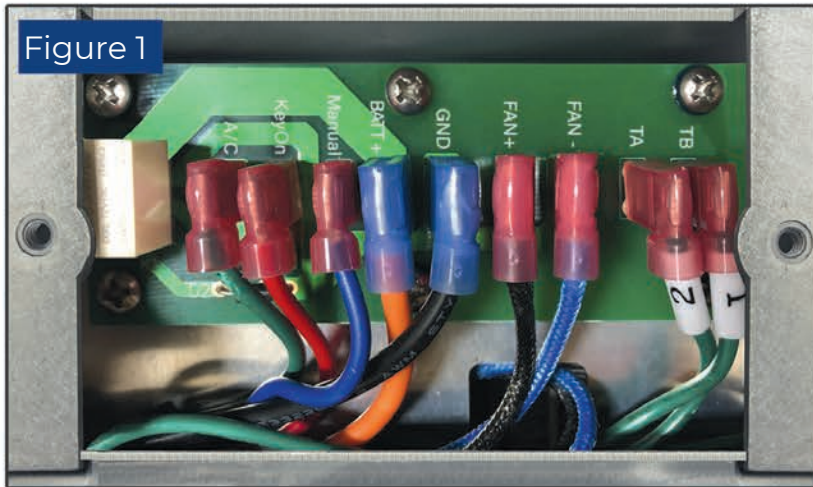

Wire Order Key:

1. A/C (green wire)
2. Key On (red wire)
3. Manual Override (blue wire)
4. Battery Positive (+) (orange wire)
5. Ground (black wire)

