




# PMGR Starter & Relay Wiring

9162, 19162, 9172, 19172, 9180, 19180,  
 9182, 19182, 9183, 19183,  
 9100, 19100, 9103, 19103, 9109, 19109, 9112, 19112

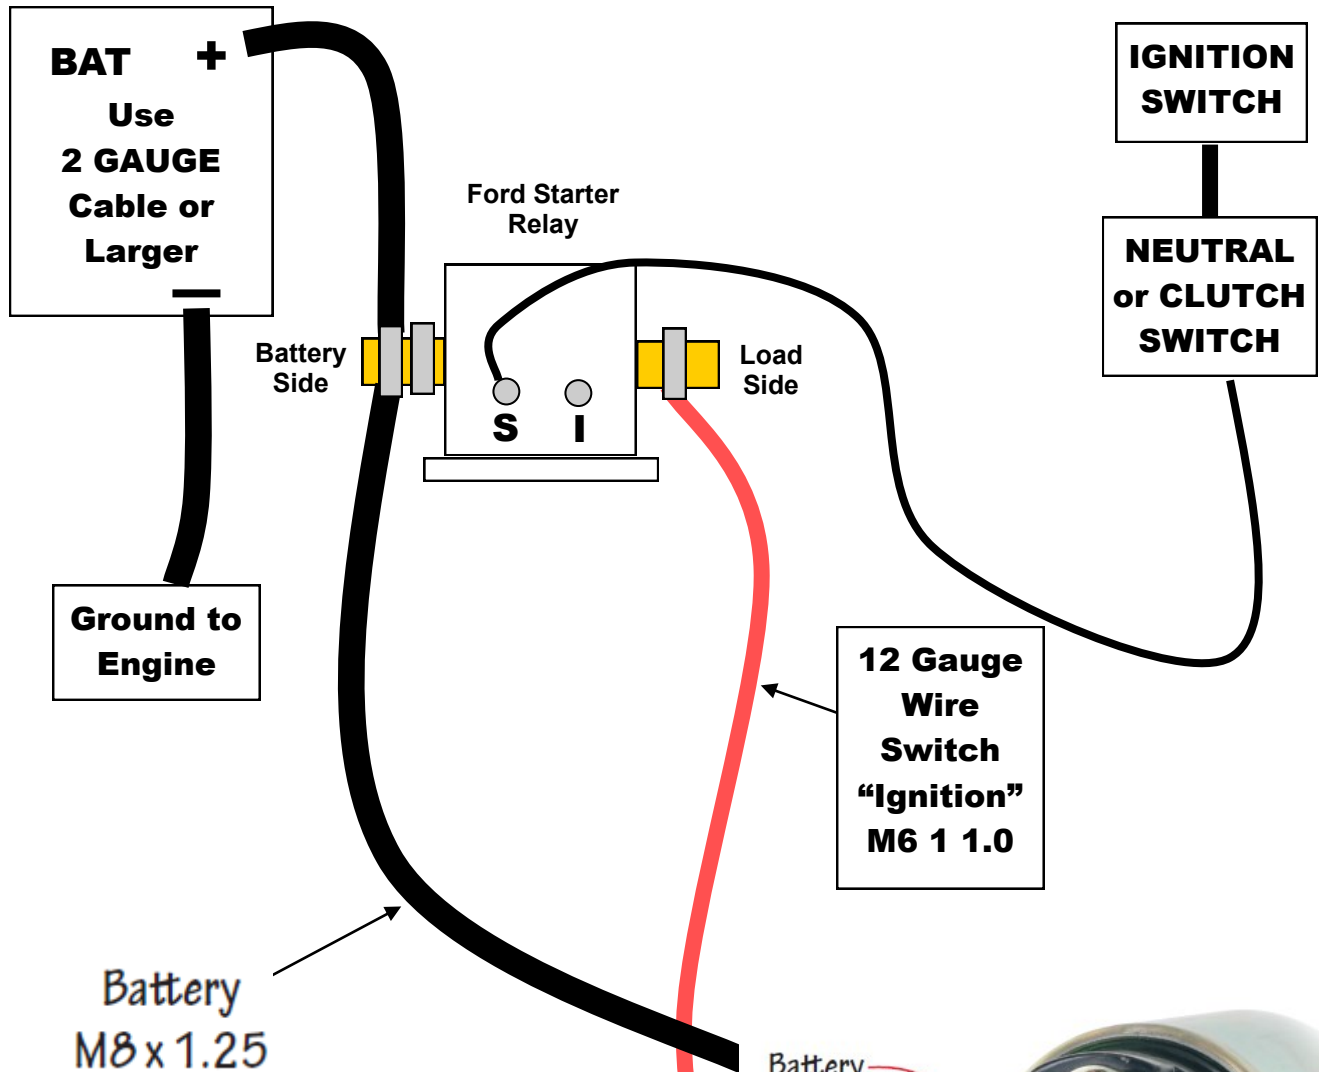

Ground to Engine


Battery  
M8 x 1.25

Do Not use a Jumper Wire on PMGR Starter Solenoid

Starter will not disengage properly w/ jumper wire

12 Gauge Wire Switch  
"Ignition"  
M6 1 1.0

Battery  
M8 x 1.25  
Switch  
"Ignition"  
M6 x 1.0  
Motor Lead  
M8 x 1.25

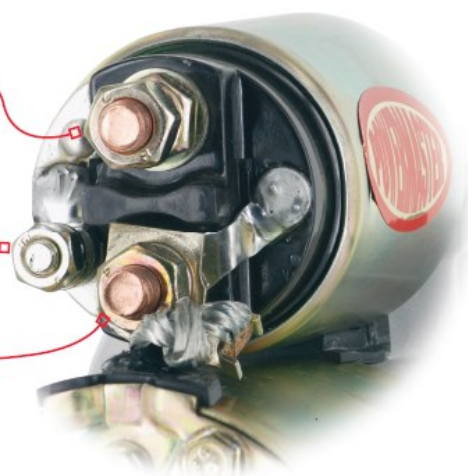

1833 Downs Drive, West Chicago, IL 60185  
 Tech Dept Phone# (630) 957-4019 Email : tech@powermasterperformance.com