




INSTALLATION INSTRUCTIONS DUAL MOUNTING BRACKET SET PART # 16701

KIT CONTENTS

QTY.	DESCRIPTION
8	M6 Square Nut Inserts
8	M6-1.0 x 12mm Washer Head Hex Screws
2	Center Brackets
2	Right Hand Brackets
2	Left hand Brackets

IMPORTANT

Designed to fit DeraLe Tornado Electric Fan series, sizes 10", 12", 14" & 16".

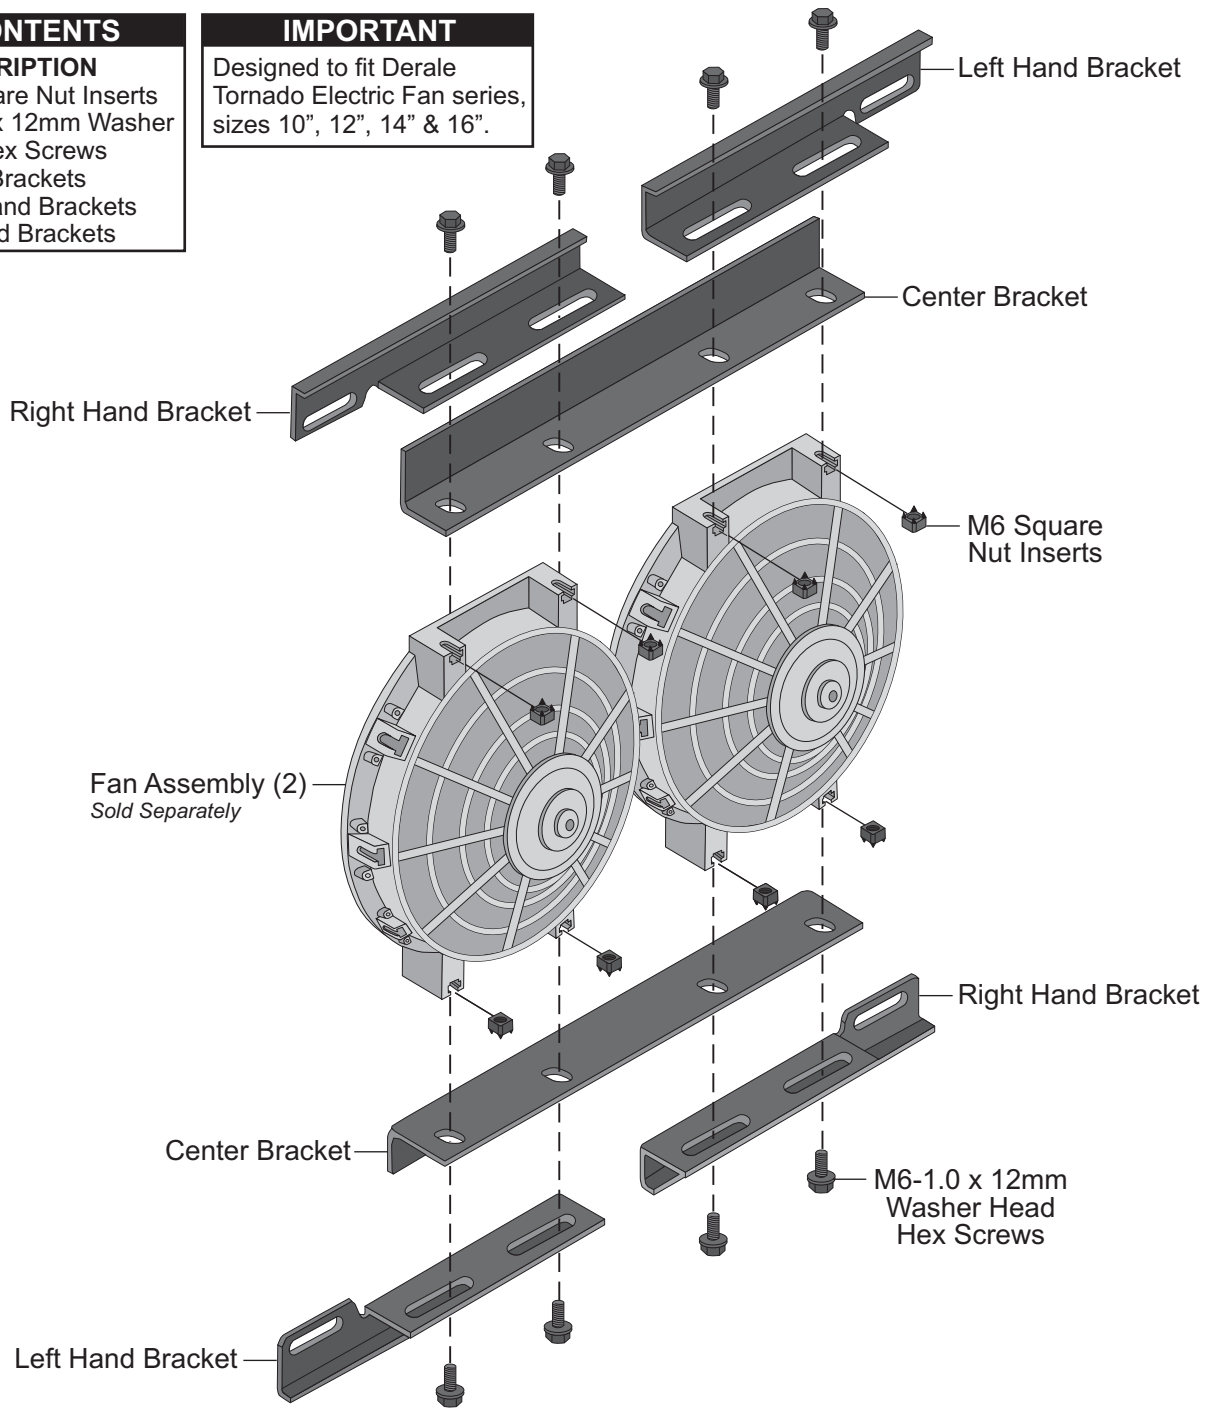

1. Slide 2 (two) each M6 Square nut inserts into slotted openings into position in flat landings on each end of electric fan assemblies as shown in illustration.
2. Align long slotted holes in right hand bracket and left hand bracket with holes in center bracket as shown, then run 2 (two) each M6 x 12mm hex screws (per fan) through brackets and into M6 square nut inserts on fans. Hand-tighten only.
3. Repeat Step 2 on opposite side of fan(s) running M6 screws first through right and left hand brackets, center brackets and are hand-tight on each side.
4. Place entire fan/bracket assembly on flat surface to "square up" assembly, then carefully tighten all four M6 screws snugly. DO NOT OVERTIGHTEN. Dual Fan Assembly is complete.

Warning: Installation of accessories should only be undertaken by those with mechanical knowledge and are familiar with working on vehicles. Always use eye protection (goggles, safety glasses or shield). Park the vehicle in a well lit area, on level ground and apply the parking brake. Only work on a cold vehicle that has been sitting overnight, failure to do so will result in severe burns and injury. Before starting the vehicle, make sure no tools or any other items are left under hood that could interfere with or be drawn into moving parts of the engine. Failure to follow instructions can lead to severe damage and personal injury.